


 















 







 
 
 





Originalfernbedienung Ersatzfernbedienung

	VHS Power		Power
	Audio		Dual
	TV Power		Shift + Power
	TV AV		Shift + AV
	TV CH +		Shift + Ch +
	TV CH -		Shift + Ch -
	TV Volume +		Vol +
	TV Volume -		Vol -
	Operation Select VHS		Smart
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8

 






 


Originalfernbedienung Ersatzfernbedienung

	9		9
	0		0
	-/-- / ≥10		Guide
	Cancel / Reset		Exit
	CH + / Tracking/V-Lock +		Ch +
	CH - / Tracking/V-Lock -		Ch -
	Input		Media
	Repeat		Text
	I<< Index/Skip		I<<
	>>I Index/Skip		>>I
	<< REW		<<
	>> FF		>>
	Stop		Stop
	Pause / Slow		Pause
	Play		Play
	Menu / Play List		Menu
	Menu / Play List		List





Originalfernbedienung Ersatzfernbedienung

	DVD Power		Power
	Audio		Dual
	TV Power		Shift + Power
	TV AV		Shift + AV
	TV CH +		Shift + Ch +
	TV CH -		Shift + Ch -
	TV Volume +		Vol +
	TV Volume -		Vol -
	Operation Select DVD		Smart
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8

Originalfernbedienung Ersatzfernbedienung

	9		9
	0		0
	-/-- / ≥10		Guide
	Cancel / Reset		Exit
	Repeat		Text
	I<< Index/Skip		I<<
	>>I Index/Skip		>>I
	<< REW		<<
	>> FF		>>
	Stop		Stop
	Pause / Slow		Pause
	Play		Play
	Direct Navigator / Top Menu		Shift + Menu
	Direct Navigator / Top Menu		D. Menu
	Menu / Play List		Menu
	Up		Up
	Left		Left



