



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Sleep		Sleep
	TV / AV		AV
	TV		Red
	VCR / AUX		Green
	Tuner / Band		Yellow
	DVD / CD		Blue
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0

Originalfernbedienung Ersatzfernbedienung

	≧10 / -/--		Guide
	Cancel		Exit
	CH +		Ch +
	CH -		Ch -
	Volume +		Vol +
	Volume -		Vol -
	I<< Skip		I<<
	>>I Skip		>>I
	<< Slow/Search		<<
	>> Slow/Search		>>
	Stop		Stop
	Pause		Pause
	Play		Play
	Top Menu / Direct Navigator		Shift + Menu
	Top Menu / Direct Navigator		List
	Menu / Play List		Menu
	Up		Up





Originalfernbedienung Ersatzfernbedienung

	Left		Left
	Enter		Ok
	Right		Right
	Down		Down
	Display / TV Vol -		Info
	Display / TV Vol -		Shift + Left
	Return / TV Vol +		Back
	Return / TV Vol +		Shift + Right
	Subwoofer		Shift + Dual
	Super SRND.		Shift + Options
	SFC		D. Menu
	C.Focus		3D
	Dolby PL II		Format
	Mix 2CH		Shift + Format
	C.S.M		Shift + Subt
	Position		Pre Ch
	Audio		Dual

Originalfernbedienung Ersatzfernbedienung

	Zoom		Eject
	Muting		Mute
	Setup		Options
	FL Display		Shift + Info
	Group		TV/R
	Page		Shift + TV/R
	Repeat		Text
	Play Mode		Shift + Play
	CH Select		Smart
	Test		Shift + Pre Ch
	Quick Replay		Media
	Subtitle		Subt

