 

 
 

 
 




 

 













 


 
 
 




**Originalfernbedienung Ersatzfernbedienung**

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Recall		Back
	Still		Pause
	TV / Input		AV
	Multimedia		Media
	Zoom -		Shift + Down
	Zoom +		Shift + Up

**Originalfernbedienung Ersatzfernbedienung**

	Up / PR +		Up
	Up / PR +		Ch +
	Down / PR -		Down
	Down / PR -		Ch -
	Right / Vol +		Right
	Right / Vol +		Vol +
	Left / Vol -		Left
	Left / Vol -		Vol -
	Menu		Menu
	Menu		Ok
	Prev PR		Pre Ch
	Screen Size		3D
	Mute		Mute
	Sleep		Sleep
	[≡]		Text
	[≡?]		Smart
	[≡X]		Exit





Originalfernbedienung   Ersatzfernbedienung

	[≡↓]		Eject
	[≡●]		TV/R
	[≡□]		Stop
	Pic Mode / [≡=]		Format
	Sound Mode / [≡!]		Dual
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue / I-II		Blue
	Blue / I-II		Shift + Dual

Originalfernbedienung   Ersatzfernbedienung


 
 
 

 
 




 
 




 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	TV / Input		AV
	Up / PR +		Up
	Up / PR +		Ch +
	Down / PR -		Down
	Down / PR -		Ch -
	Menu		Menu

Originalfernbedienung Ersatzfernbedienung

	Menu		Ok
	<< FR / Slow		<<
	Play		Play
	>> FF / Slow		>>
	Stop		Stop
	I<< Prev		I<<
	Open / Close		Eject
	>>I Next		>>I
	Pause		Pause





**Originalfernbedienung Ersatzfernbedienung**

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Up / PR +		Up
	Up / PR +		Ch +
	Down / PR -		Down
	Menu		Ok
	Down / PR -		Ch -
	Menu		Menu

**Originalfernbedienung Ersatzfernbedienung**

	Red		Red
	Green		Green
	Yellow		Yellow
	Blue / I-II		Blue
	Blue / I-II		Dual

