



Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|---------------|--|--------------|
| | Power | | Power |
| | TTX / Mix | | Text |
| | TV / DTV | | Shift + TV/R |
| | Guide | | Guide |
| | CH. List | | List |
| | 1 | | 1 |
| | 2 | | 2 |
| | 3 | | 3 |
| | 4 | | 4 |
| | 5 | | 5 |
| | 6 | | 6 |
| | 7 | | 7 |
| | 8 | | 8 |
| | 9 | | 9 |
| | 0 | | 0 |
| | APP | | Media |
| | Pre-CH / Back | | Pre Ch |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|---------------|--|---------|
| | Pre-CH / Back | | Back |
| | Mute | | Mute |
| | Vol + | | Vol + |
| | Vol - | | Vol - |
| | P + | | Ch + |
| | P - | | Ch - |
| | Source | | AV |
| | Menu | | Menu |
| | D.Menu | | D. Menu |
| | Info | | Info |
| | Exit | | Exit |
| | Up | | Up |
| | Left | | Left |
| | Enter / OK | | Ok |
| | Right | | Right |
| | Down | | Down |
| | Red | | Red |




Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|------------|---|----------------|
|  | Green |  | Green |
|  | Yellow |  | Yellow |
|  | Blue |  | Blue |
|  | Subtitle |  | Subt |
|  | P.Size |  | Format |
|  | Sleep |  | Sleep |
|  | P.Mode |  | Shift + Format |
|  | S.Mode |  | Shift + Dual |
|  | Dual I-II |  | Dual |
|  | TV / Radio |  | TV/R |
|  | ALT |  | Smart |
|  | Text |  | Shift + Text |
|  | PIP |  | Options |
|  | Still |  | Pause |
|  | PIP Swap |  | 3D |
| | | | |
| | | | |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|--|--|--|
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

