


Originalfernbedienung Ersatzfernbedienung

	Standby		Power
	Mute		Mute
	Recall		Back
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Page +		Ch +
	Page -		Ch -
	Vol +		Vol +
	Vol -		Vol -




 


Originalfernbedienung Ersatzfernbedienung

	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	Menu		Menu
	EPG		Guide
	Exit		Exit
	Lang		Dual
	Audio		Shift + Dual
	SUB-T		Subt
	Info		Info
	FAV		Pre Ch
	TV / Radio		TV/R
	TTX		Text
	Pause		Pause
	Red		Red





Originalfernbedienung Ersatzfernbedienung

	Green		Green
	Yellow		Yellow
	Blue		Blue

Originalfernbedienung Ersatzfernbedienung

