





 

 

 

 
 

 

 






 
 


 

 











**Originalfernbedienung Ersatzfernbedienung**

	Power		Power
	Nicam/Eject		Eject
	Mute		Mute
	Display	 + 	Shift + Info
	Sleep		Sleep
	Aspect		Format
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	FAV		Pre Ch

**Originalfernbedienung Ersatzfernbedienung**

	Recall		Back
	Tv-Menu		Menu
	Source		AV
	DVD Setup		Options
	Up		Up
	Left		Left
	Enter		Ok
	Right		Right
	Down		Down
	Red/Repaet		Red
	Green/Zoom		Green
	Yellow/Angle		Yellow
	Blue/Goto		Blue
	Text/Audio		Text
	Tv/Radio/Menu		TV/R
	Exit		Exit
	P.Mode	 + 	Shift + Format

 





Originalfernbedienung Ersatzfernbedienung

	S.Mode		Dual
	Vol+		Vol +
	Vol-		Vol -
	CH+		Ch +
	CH-		Ch -
	I<</Index		I<<
	Play/Reveal		Play
	Pause		Pause
	>>I/Subpage		>>I
	<<		<<
	Stop/Size		Stop
	>>		>>
	Hold/A-B/Rec List		List
	Rec/Slow		Rec
	Time Shift		Smart
	EPG/Program		Guide
	Subtitle		Subt

Originalfernbedienung Ersatzfernbedienung

	Info/Title		Info

