





 













 



 
 
 

 

 

 






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Audio		Dual
	Tv/Radio		TV/R
	Recall		Back
	FAV		Pre Ch
	Menu		Menu





Originalfernbedienung Ersatzfernbedienung

	Exit		Exit
	CH+		Ch +
	CH-		Ch -
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Vol+		Vol +
	Vol-		Vol -
	Pause		Pause
	Text		Text
	Multivideo		Smart
	<</FAV Up		<<
	>>/FAV Down		>>
	Tv/VCR		Media
	Subtitle		Subt





Originalfernbedienung Ersatzfernbedienung Originalfernbedienung Ersatzfernbedienung

	Info		Info
	EPG		Guide

