


**Originalfernbedienung Ersatzfernbedienung**

|  |                  |  |                  |
|--|------------------|--|------------------|
|  | Power            |  | Power            |
|  | 1                |  | 1                |
|  | 2                |  | 2                |
|  | 3                |  | 3                |
|  | 4                |  | 4                |
|  | 5                |  | 5                |
|  | 6                |  | 6                |
|  | 7                |  | 7                |
|  | 8                |  | 8                |
|  | 9                |  | 9                |
|  | Recall           |  | Back / Return    |
|  | 0                |  | 0                |
|  | Source           |  | AV / Input / RDS |
|  | Vol+             |  | Vol+             |
|  | A/D/Content Menu |  | Smart / List     |
|  | P+               |  | CH+ / Page+      |
|  | Vol-             |  | Vol-             |

**Originalfernbedienung Ersatzfernbedienung**

|  |                  |  |                             |
|--|------------------|--|-----------------------------|
|  | Mute             |  | Mute / Dimmer               |
|  | P-               |  | CH- / Page-                 |
|  | Menu/DVD         |  | Menu / Home                 |
|  | Exit/Return      |  | Exit / Cancel / Clear       |
|  | Up               |  | Up                          |
|  | Left             |  | Left                        |
|  | OK               |  | OK                          |
|  | Right            |  | Right                       |
|  | Guide/Top        |  | Guide / EPG / -/-           |
|  | Down             |  | Down                        |
|  | Tv/FAV/Radio/Set |  | TV/Radio /                  |
|  | Tv/FAV/Radio/Set |  | Fav / Marker / PC           |
|  | Red              |  | Red / Netflix / Search      |
|  | Green            |  | Green / APP / Repeat        |
|  | Yellow           |  | Yellow / YouTube / Repeat   |
|  | Blue             |  | Blue / Prime Video / Random |
|  | [<>]             |  | Picture / Format            |





Originalfernbedienung    Ersatzfernbedienung

|   |              |   |                           |
|---|--------------|---|---------------------------|
|    | ←[/]→        |    | Display / Media           |
|    | [i+]/[≡i]    |    | Info / Angle              |
|    | Text         |    | Text / Goto               |
|    | Audio        |    | Audio / Lang I/II         |
|    | Subtitle     |    | Subtitle / EQ             |
|    | Eject        |    | Eject / Surround          |
|    | O)/I/II      |    | Shift + Audio / Lang I/II |
|    | Stop         |    | Stop / Hold               |
|    | Play/[≡o]    |    | Play / Slow               |
|    | II/II>/[▼]   |    | Pause / Step / Freeze     |
|    | I<</[≡?]     |    | I<< / Preset-             |
|    | <</[≡+]      |    | << / Tune-                |
|   | >>/[≡◇]      |   | >> / Tune+                |
|  | >>I/[O]/[≡X] |  | >>I / Preset+             |
|   |              |   |                           |
|   |              |   |                           |
|   |              |   |                           |
|   |              |   |                           |
|   |              |   |                           |
|   |              |   |                           |
|   |              |   |                           |
|   |              |   |                           |
|   |              |   |                           |



Originalfernbedienung    Ersatzfernbedienung

|  |  |  |  |
|--|--|--|--|
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |






**Originalfernbedienung    Ersatzfernbedienung**

|   |             |   |                  |
|---|-------------|---|------------------|
|    | Power       |    | Power            |
|    | 1           |    | 1                |
|    | 2           |    | 2                |
|    | 3           |    | 3                |
|    | 4           |    | 4                |
|    | 5           |    | 5                |
|    | 6           |    | 6                |
|    | 7           |    | 7                |
|    | 8           |    | 8                |
|    | 9           |    | 9                |
|   | 0           |   | 0                |
|  | Source      |  | AV / Input / RDS |
|  | Vol+        |  | Vol+             |
|  | Vol-        |  | Vol-             |
|  | Mute        |  | Mute / Dimmer    |
|  | Menu/DVD    |  | Menu / Home      |
|  | Exit/Return |  | Back / Return    |

**Originalfernbedienung    Ersatzfernbedienung**

|   |                  |   |                           |
|---|------------------|---|---------------------------|
|    | Up               |    | Up                        |
|    | Left             |    | Left                      |
|    | OK               |    | OK                        |
|    | Right            |    | Right                     |
|    | Guide/Top        |    | D.Menu / Top              |
|    | Down             |    | Down                      |
|    | Tv/FAV/Radio/Set |    | Setup / OPT /             |
|    | [<>]             |    | Picture / Format          |
|    | ←[ ]→            |    | Display / Media           |
|    | [i+]/[≡i]        |    | Info / Angle              |
|   | Text             |   | Text / Goto               |
|  | Audio            |  | Audio / Lang I/II         |
|  | Subtitle         |  | Subtitle / EQ             |
|  | Eject            |  | Eject / Surround          |
|  | O)/I/II          |  | Shift + Audio / Lang I/II |
|  | Stop             |  | Stop / Hold               |
|  | Play/[≡o]        |  | Play / Slow               |





Originalfernbedienung Ersatzfernbedienung

|   |              |   |                       |
|---|--------------|---|-----------------------|
|  | II/II>/[▼]   |  | Pause / Step / Freeze |
|  | I<</[≡?]     |  | I<< / Preset-         |
|  | <</[≡+]      |  | << / Tune-            |
|  | >>/[≡◇]      |  | >> / Tune+            |
|  | >>I/[O]/[≡X] |  | >>I / Preset+         |
|   |              |   |                       |
|   |              |   |                       |
|   |              |   |                       |
|   |              |   |                       |
|   |              |   |                       |
|   |              |   |                       |
|   |              |   |                       |
|   |              |   |                       |
|   |              |   |                       |
|   |              |   |                       |
|   |              |   |                       |
|   |              |   |                       |
|   |              |   |                       |
|   |              |   |                       |
|   |              |   |                       |
|   |              |   |                       |
|   |              |   |                       |
|   |              |   |                       |
|   |              |   |                       |





























Originalfernbedienung Ersatzfernbedienung

|  |  |  |  |
|--|--|--|--|
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |





**Originalfernbedienung Ersatzfernbedienung**

|   |               |   |                  |
|---|---------------|---|------------------|
|    | Power         |    | Power            |
|    | 1             |    | 1                |
|    | 2             |    | 2                |
|    | 3             |    | 3                |
|    | 4             |    | 4                |
|    | 5             |    | 5                |
|    | 6             |    | 6                |
|    | 7             |    | 7                |
|    | 8             |    | 8                |
|    | 9             |    | 9                |
|   | Recall        |   | Back / Return    |
|  | 0             |  | 0                |
|  | Source        |  | AV / Input / RDS |
|  | Vol+          |  | Vol+             |
|  | A/D / Content |  | Smart / List     |
|  | P+            |  | CH+ / Page+      |
|  | Vol-          |  | Vol-             |

**Originalfernbedienung Ersatzfernbedienung**

|   |                  |   |                             |
|---|------------------|---|-----------------------------|
|    | Mute             |    | Mute / Dimmer               |
|    | P-               |    | CH- / Page-                 |
|    | Menu/DVD         |    | Menu / Home                 |
|    | Exit/Return      |    | Shift + Back / Return       |
|    | Exit/Return      |    | Exit / Cancel / Clear       |
|    | Up               |    | Up                          |
|    | Left             |    | Left                        |
|    | OK               |    | OK                          |
|    | Right            |    | Right                       |
|    | Guide/Top        |    | D.Menu / Top                |
|   | Down             |   | Down                        |
|  | Tv/FAV/Radio/Set |  | TV/Radio /                  |
|  | Tv/FAV/Radio/Set |  | Setup / OPT /               |
|  | Red              |  | Red / Netflix / Search      |
|  | Green            |  | Green / APP / Repeat        |
|  | Yellow           |  | Yellow / YouTube / Repeat   |
|  | Blue             |  | Blue / Prime Video / Random |





Originalfernbedienung   Ersatzfernbedienung

|   |              |   |                           |
|---|--------------|---|---------------------------|
|    | [<>]         |    | Picture / Format          |
|    | <-[/]→       |    | Display / Media           |
|    | [i+]/[≡i]    |    | Info / Angle              |
|    | Text         |    | Text / Goto               |
|    | Audio        |    | Audio / Lang I/II         |
|    | Subtitle     |    | Subtitle / EQ             |
|    | Eject        |    | Eject / Surround          |
|    | O)I/II       |    | Shift + Audio / Lang I/II |
|    | Stop         |    | Stop / Hold               |
|    | Play/[≡o]    |    | Play / Slow               |
|  | /II>/[▼]     |  | Pause / Step / Freeze     |
|  | I<</[≡?]     |  | I<< / Preset-             |
|  | <</[≡+]      |  | << / Tune-                |
|  | >>/[≡♦]      |  | >> / Tune+                |
|  | >>I/[O]/[≡X] |  | >>I / Preset+             |

Originalfernbedienung   Ersatzfernbedienung

|  |  |  |  |
|--|--|--|--|
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |

