

 

 
 
 

 
 
 

 



 

 
 


 

 
 



 




 
 
 

 
 
 

 

 
 


 
 


 


 
 

 
 




 
 
 




 


 


 
 
 
 







Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	Power		Power
	Input		AV
	TV / TXT		Text
	Cancel		Shift + Exit
	Reveal		Smart
	Nicam / A2		Options
	Hold		Stop
	Size		Format
	Subpage		Shift + Subt
	Index		Shift + Info
	Red / TV/Radio		Red
	Red / TV/Radio		TV/R
	Green		Green
	Yellow		Yellow
	Blue		Blue
	CH +		Ch +
	CH -		Ch -
	Vol +		Vol +
	Vol -		Vol -
	Menu		Menu
	Mute		Mute
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	DVB		Media
	Exit		Exit
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6







Originalfernbedienung Ersatzfernbedienung

	7		7
	8		8
	9		9
	0		0
	-/--		Shift + Guide
	Recall		Back
	Picture		Shift + Format
	Sound		Shift + Dual
	Sleep		Sleep
	Subtitle		Subt
	Language		Dual
	Display / Info		Info
	Zoom		Eject
	Text		Shift + Text
	FAV		Pre Ch
	EPG		Guide
	FAV -		I<<

Originalfernbedienung Ersatzfernbedienung

	FAV +		>>I
---	-------	---	-----

