


 

 
 
 


 

 


 

 


 


 







Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Video		Shift + 4
	Mute		Mute / Dimmer
	Open / Close		Eject / Surround
	USB		Shift + 8
	Prog		TV/Radio /
	Mark		Fav / Marker / PC
	Clear		Exit / Cancel / Clear
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9

Originalfernbedienung Ersatzfernbedienung

	0		0
	10+		Guide / EPG / -/-
	Goto		Text / Goto
	<<		<< / Tune-
	Vol -		Vol-
	Vol +		Vol+
	I<<		I<< / Preset-
	Play / Pause		Play / Slow
	Stop		Stop / Hold
	>>		>> / Tune+
	Repeat		Green / APP / Repeat
	A-B		Yellow / YouTube / Repeat
	>>I		>>I / Preset+
	Menu / Ripping		Menu / Home
	Up		Up
	Setup		Setup / OPT /
	Left		Left





Originalfernbedienung Ersatzfernbedienung

	Enter		OK
	Right		Right
	Title		Sound / Title
	Down		Down
	OSD		Display / Media
	Zoom		Zoom / Size
	Angle		Info / Angle
	Audio		Audio / Lang I/II
	Sub-T		Subtitle / EQ
	Step		Pause / Step / Freeze
	Slow	+	Shift + Play /
	Return		Back / Return
	Default		D.Menu / Top

Originalfernbedienung Ersatzfernbedienung

