

 
 






 



 



 


 

 

 

 










Originalfernbedienung Ersatzfernbedienung


 


 


 
 







 



 

 
 

 
	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	PR.List		List
	Recall		Back
	Vol+		Vol +
	Vol-		Vol -
	Pic Mode		Shift + Format

Originalfernbedienung Ersatzfernbedienung

	S.Mode		Shift + Dual
	Source		AV
	Prog+		Ch +
	Prog-		Ch -
	Exit		Exit
	Menu		Menu
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Zoom		Eject
	Sleep		Sleep
	DNR		Media
	MTS		Smart
	Red		Red
	Green		Green




Originalfernbedienung Ersatzfernbedienung

	Yellow		Yellow
	Blue		Blue
	FAV		Pre Ch
	Tv/Radio		TV/R
	Audio		Dual
	Subtitle		Subt
	Size		Format
	Reveal		Options
	EPG		Guide
	Info		Info
	Text		Text
	Index		D. Menu
	Subpage	 + 	Shift + Subt
	Hold		3D

Originalfernbedienung Ersatzfernbedienung

