
 



 
 







 
 
 


 


 
 





 
 
 


 


 



 
 
 



 



Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
PWR On/Off		Power	
Mute		Mute	
Epg	 + 	Shift + Guide	
Info	 + 	Shift + Info	
Subt.List		Subt	
Opt?		Options	
Sleep Timer		Sleep	
App		Media	
TV		TV/R	
Video		D. Menu	
Text		Text	
Zoom		Eject	
TV/SAT		AV	
Menu		Menu	
Menu Up		Up	
Display		Info	
Menu Left		Left	
OK Enter		Ok	
Menu Right		Right	
Exit		Exit	
Menu Down		Down	
Back		Back	
Audio		Dual	
Volume+		Vol +	
CH/Page+		Ch +	
Volume-		Vol -	
CH/Page-		Ch -	
1. ?		1	
2abc		2	
3def		3	
4ghi		4	
5jkl		5	
6mno		6	
7pqrm		7	



Originalfernbedienung Ersatzfernbedienung

8tuv		8
9wxyz		9
Guide Pilote		Guide
0/10		0
FAV Pref.		Pre Ch
Red		Red
+		Smart
Dev		List
Green		Green
Freeze		Stop
Dec/Pause		Pause
Yellow		Yellow
Blue		Blue
Sys/Serv		Shift + Sleep
West		I<<
SAT Sky		Shift + AV
		Shift + Ch +

Originalfernbedienung Ersatzfernbedienung

		Shift + Ch -
H/V Play		Play
East		>>
Lang./Rewind		<<
LNB F.Forward		>>

