












 



 















 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Setup		Options
	TV Out		TV/R
	Func		D. Menu
	Mute		Mute
	Eject		Eject
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Refresh		Pre Ch

Originalfernbedienung Ersatzfernbedienung

	Info		Info
	Media		Media
	Stop		Stop
	Play		Play
	Pause		Pause
	Goto		Smart
	Return		Back
	Jukebox		Yellow
	Add		Red
	Delete		Blue
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	<<		<<
	>>		>>





Originalfernbedienung Ersatzfernbedienung

	I<<<		I<<<
	>>>I		>>>I
	Zoom		Shift + Eject
	Repeat		Text
	RND/SEQ		Format
	Title		AV
	Audio		Dual
	A-B		Green
	Menu		Menu
	Sleep		Sleep
	Subtitle		Subt
	Vol+		Vol +
	Vol-		Vol -
	Lock		Exit

Originalfernbedienung Ersatzfernbedienung

