
 
 


 
 

 


 

 




 

 

 
 


 
 



 


| Originalfernbedienung | Ersatzfernbedienung   | Originalfernbedienung | Ersatzfernbedienung |
|-----------------------|---|-----------------------|---------------------|
| Power ON/Off          |      | Power                 |                     |
| Mute                  |      | Mute                  |                     |
| Every Pop             |      | Dual                  |                     |
| Tape 1 Stop           |      | Stop                  |                     |
| Tape 1 Preset         |      | Options               |                     |
| Vol Rs-/Effect        |      | Subt                  |                     |
| Sleep                 |      | Sleep                 |                     |
| Preset Pause          |      | Pause                 |                     |
| CD Random             |      | TV/R                  |                     |
| Tape 2 Pre./eq        |      | 3D                    |                     |
| Vol Rs+/S.Mode        |     | Eject                 |                     |
| Input/Source          |    | AV                    |                     |
| CD/Theater            |    | Menu                  |                     |
| CD Play               |    | Up                    |                     |
| Display               |    | Info                  |                     |
| CD Rewind             |    | Left                  |                     |
| Stop                  |    | Ok                    |                     |
| CD F.FWD              |    | Right                 |                     |
| Funct./Direct         |    | D. Menu               |                     |
| CD Pause              |    | Down                  |                     |
| Woofer/Speed          |    | Back                  |                     |
| Volume+               |    | Vol +                 |                     |
| Next/Prog+            |    | Ch +                  |                     |
| Volume-               |    | Vol -                 |                     |
| Tape 1 Hall/Ats       |    | List                  |                     |
| Prev./Prog-           |    | Ch -                  |                     |
| Mode                  |   | Guide                 |                     |
| Program               |  | Pre Ch                |                     |
| Tape 1 Rec            |  | Rec                   |                     |
| Tape 1 F.FWD          |  | >>                    |                     |
| Tape 1 Rew            |  | <<                    |                     |
| Tape 1 Play           |  | Play                  |                     |

