
 



 


 
 
 
 

 
 
 
 










 

 
 


 



Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
On/Off		Power	
Mute		Mute	
Update		Smart	
Reveal		Format	
Txt Stop		Stop	
Subt.List		Subt	
Sleep Timer		Sleep	
Return TV		TV/R	
Info		Info	
Menu video		D. Menu	
Text		Text	
Txt Expand		Eject	
TV/AV		AV	
Menu		Menu	
Display	 +  Shift + Info		
Menu Up		Up	
Menu Down		Down	
Menu Right		Right	
Menu Left		Left	
OK Enter		Ok	
Menu Off		Exit	
Back		Back	
Volume+		Vol +	
Volume-		Vol -	
Chan.Up		Ch +	
Chan.Down		Ch -	
Menu audio		Dual	
1		1	
2		2	
3		3	
4		4	
5		5	
6		6	
7		7	



Originalfernbedienung Ersatzfernbedienung

8	8	8
9	9	9
0/10	0	0
Guide -/-- 1.	GUIDE	Guide
2.Fav P/C 2.	PRE-CH	Pre Ch
Red	A	Red
Tone-	⏪	I<<
Tone+	⏩	>>I
Audio-	⏮	<<
Color- S.Std	DISC NAV LIST	List
Audio+	⏭	>>
Green	B	Green
Yellow	C	Yellow
Blue	D	Blue
On/Tim	SHIFT + AD SUBT	Shift + Subt
Game Coo	SHIFT + ZOOM	Shift + Eject
Browse	SHIFT + RETURN BACK	Shift + Back

Originalfernbedienung Ersatzfernbedienung

Contrast+	SHIFT + + CH	Shift + Ch +
Contrast-	SHIFT + - CH	Shift + Ch -
Swap	APP MEDIA	Media
Surround	SHIFT + A	Shift + Red
On Pip	ECO 3D	3D
Nicam/Mono	SHIFT + B	Shift + Green
Level L	SHIFT + C	Shift + Yellow
Level R/Woofer	SHIFT + D	Shift + Blue

