



Originalfernbedienung Ersatzfernbedienung

	Standby / On		Power
	BD		Shift + 5
	DVD		Shift + 2
	DVR / BDR		Shift + 7
	HDMI		Shift + 0
	TV		Shift + 1
	CD		Shift + 3
	NET		Shift + 9
	ADPT		Shift + Guide / EPG / -/-
	iPod / USB		Shift + 8
	SAT / CBL		Shift + Fav / Marker / PC
	MHL		Shift + 4
	TUNER		Shift + 6
	Input Select ↻		CH- / Page-
	Input Select ↻		CH+ / Page+
	i / Status		Info / Angle
	Volume+		Vol+

Originalfernbedienung Ersatzfernbedienung

	Volume-		Vol-
	Mute		Mute / Dimmer
	Audio		Audio / Lang I/II
	Up		Up
	Video		Picture / Format
	Tools Menu		Setup / OPT /
	Left		Left
	Enter		OK
	Right		Right
	Home Menu		Menu / Home
	iPod Ctrl.		D.Menu / Top
	Down		Down
	Return		Back / Return
	Features PHASE		Red / Netflix / Search
	Features ECO		Yellow / YouTube / Repeat
	MPX		Shift + Pause / Step / Freeze
	Pause		Pause / Step / Freeze





Originalfernbedienung Ersatzfernbedienung

	BAND	 + 	Shift + Play /
	Play		Play / Slow
	PTY	 + 	Shift + Stop /
	Stop		Stop / Hold
	Preset -	 + 	Shift + I<< / Preset-
	I<<		I<< / Preset-
	Preset+	 + 	Shift + >>I / Preset+
	>>I		>>I / Preset+
	Tune-	 + 	Shift + << /
	<<		<< / Tune-
	Tune+	 + 	Shift + >> /
	>>		>> / Tune+
	Auto / ALC /		Subtitle / EQ
	1		1
	Standard		Smart / List
	2		2
	Adv. Surr.		Eject / Surround

Originalfernbedienung Ersatzfernbedienung

	3		3
	+ Favorite		Fav / Marker / PC
	Audio / THX		Sound / Title
	4		4
	Signal Sel.		TV/Radio /
	MCACC		Zoom / Size
	5		5
	6		6
	CH. Level		Text / Goto
	Disp / Auto		Display / Media
	7		7
	Speakers	 + 	Shift + Audio / Lang I/II
	Dimmer	 + 	Shift + Mute / Dimmer
	8		8
	9		9
	Sleep		Sleep / Timer
	Repeat		Green / APP / Repeat





Originalfernbedienung Ersatzfernbedienung

	HDMI Out		AV / Input / RDS
	0		0
	Class		Exit / Cancel / Clear
	Shuffle		Blue / Prime Video / Random

Originalfernbedienung Ersatzfernbedienung





 


 
 

 




Originalfernbedienung Ersatzfernbedienung

	Standby / On		Power
	BD		Shift + 5
	DVD		Shift + 2
	DVR / BDR		Shift + 7
	HDMI		Shift + 0
	TV		Shift + 1
	CD		Shift + 3
	NET		Shift + 9
	ADPT		Shift + Guide / EPG / -/-
	iPod / USB		Shift + 8
	SAT / CBL		Shift + Fav / Marker / PC
	MHL		Shift + 4
	TUNER		Shift + 6
	Input Select ↻		CH- / Page-
	Input Select ↻		CH+ / Page+
	i / Status		Info / Angle
	Volume+		Vol+

Originalfernbedienung Ersatzfernbedienung

	Volume-		Vol-
	Mute		Mute / Dimmer
	Audio		Audio / Lang I/II
	Up		Up
	Video		Picture / Format
	Tools Menu		Setup / OPT /
	Left		Left
	Enter		OK
	Right		Right
	Home Menu		Menu / Home
	iPod Ctrl.		D.Menu / Top
	Down		Down
	Return		Back / Return
	Features PHASE		Red / Netflix / Search
	Features ECO		Yellow / YouTube / Repeat
	MPX		Shift + Pause / Step / Freeze
	Pause		Pause / Step / Freeze





Originalfernbedienung Ersatzfernbedienung

	BAND	 + 	Shift + Play /
	Play		Play / Slow
	PTY	 + 	Shift + Stop /
	Stop		Stop / Hold
	Preset -	 + 	Shift + I<< / Preset-
	I<<		I<< / Preset-
	Preset+	 + 	Shift + >>I / Preset+
	>>I		>>I / Preset+
	Tune-	 + 	Shift + << /
	<<		<< / Tune-
	Tune+	 + 	Shift + >> /
	>>		>> / Tune+
	Auto / ALC /		Subtitle / EQ
	1		1
	Standard		Smart / List
	2		2
	Adv. Surr.		Eject / Surround

Originalfernbedienung Ersatzfernbedienung

	3		3
	+ Favorite		Fav / Marker / PC
	Audio / THX		Sound / Title
	4		4
	Signal Sel.		TV/Radio /
	MCACC		Zoom / Size
	5		5
	6		6
	CH. Level		Text / Goto
	Disp / Auto		Display / Media
	7		7
	Speakers	 + 	Shift + Audio / Lang I/II
	Dimmer	 + 	Shift + Mute / Dimmer
	8		8
	9		9
	Sleep		Sleep / Timer
	Repeat		Green / APP / Repeat





Originalfernbedienung Ersatzfernbedienung

HDMI OUT 0	HDMI Out	RDS AV INPUT	AV / Input / RDS
HDMI OUT 0	0	HDMI - SAT 0	0
CLASS ENTER	Class	CLEAR EXIT CANCEL	Exit / Cancel / Clear
CH-	Shuffle	Prime Video RANDOM	Blue / Prime Video / Random

Originalfernbedienung Ersatzfernbedienung

