


 

 
 

 

 

 

 











 

 
 










 




 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	EPG		Guide
	Info		Info
	Vol+		Vol +
	Vol-		Vol -
	Smart		Smart
	Mute		Mute

Originalfernbedienung Ersatzfernbedienung

	Prog+		Ch +
	Prog-		Ch -
	Menu		Menu
	List		List
	Back		Back
	Exit		Exit
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Audio		Dual
	Sub		Subt



