



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Scan		Setup / OPT /
	Time		Sleep / Timer
	Mute		Mute / Dimmer
	Vol+		Vol+
	Vol-		Vol-
	Source		AV / Input / RDS
	CH+		CH+ / Page+
	CH-		CH- / Page-
	Mode		Picture / Format
	Tv/Radio		TV/Radio /
	Audio		Audio / Lang I/II
	L/R		Display / Media
	PC Auto/Subtitle		Smart / List
	Menu		Menu / Home
	Program		Shift + TV/Radio / Program
	Up		Up


Originalfernbedienung Ersatzfernbedienung

	Down		Down
	Right		Right
	Left		Left
	OK		OK
	FAV		Fav / Marker / PC
	EPG		Guide / EPG / -/-
	TTX/MIX		Text / Goto
	Info		Info / Angle
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	1		1
	2		2
	3		3
	4		4
	5		5





Originalfernbedienung Ersatzfernbedienung

	6		6
	7		7
	8		8
	9		9
	0		0
	-/--	 + 	Shift + Guide / EPG / -/--
	Recall		Back / Return

Originalfernbedienung Ersatzfernbedienung

