



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Sleep		Sleep
	VIDEO1		1
	VIDEO2		2
	VIDEO3		3
	DVD		4
	TV/SAT		5
	MD/TAPE		6
	CD/SACD		7
	TUNER		8
	PHONO		9
	AUX		0
	Source		AV
	1		Shift + 1
	2CH		Guide
	2		Shift + 2
	A.F.D.		TV/R










 

 

 
Originalfernbedienung Ersatzfernbedienung

	3		Shift + 3
	Movie		Media
	Music		Options
	4		Shift + 4
	Test Tone		Text
	5		Shift + 5
	Direct		Smart
	6		Shift + 6
	AAC / Bi-Ling		Dual
	SB. Decoding		Subt
	7		Shift + 7
	8		Shift + 8
	9		Shift + 9
	0		Shift + 0
	Preset+ / CH+ / D.Skip+		Ch +
	Preset- / CH- / D.Skip-		Ch -
	Shift		3D





Originalfernbedienung Ersatzfernbedienung

 AV MENU	AV Menu	 MENU	Menu
	Up		Up
	Left		Left
	Enter	 OK	Ok
	Right		Right
	Down		Down
	Muting	 MUTE	Mute
	Master Vol +		Vol +
	Master Vol -		Vol -
	On Screen	 SHIFT +  OPT	Shift + Options

Originalfernbedienung Ersatzfernbedienung