





 



 
 






 


 

 







 






Originalfernbedienung Ersatzfernbedienung

	Standby		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Recall		Back
	Rec		Rec
	Rec Stop		Shift + Stop
	<<		<<
	>>		>>

Originalfernbedienung Ersatzfernbedienung

	I<<		I<<
	>>I		>>I
	Play		Play
	Pause		Pause
	Stop		Stop
	Live TV		TV/R
	RECD TV		Smart
	Music		Dual
	Pictures		Format
	Vaio		Media
	CD/DVD		AV
	Menu		Menu
	Tools		Options
	Controls		Guide
	Up		Up
	Down		Down
	Right		Right



