
 



Originalfernbedienung Ersatzfernbedienung


 



 




 
 
 





 
 


 
 
 
 
 
	Power		Power
	Tv/AV		AV
	TV/TXT		Text
	Cancel		Eject
	Reveal		Media
	DTV		Smart
	Hold		3D
	Size		Format
	Subpage		Shift + Subt
	Index		Options
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	CH+		Ch +
	CH-		Ch -
	Menu		Menu

Originalfernbedienung Ersatzfernbedienung

	Exit		Exit
	Vol+		Vol +
	Vol-		Vol -
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9




Originalfernbedienung Ersatzfernbedienung

	0		0
	FAV		Pre Ch
	Recall		Back
	Picture	 + 	Shift + Format
	Sound		Dual
	Nicam/A2		D. Menu
	Mute		Mute
	Sleep		Sleep
	Info		Info
	Subtitle		Subt
	Channel List		List
	EPG		Guide
	Tv/Radio		TV/R

Originalfernbedienung Ersatzfernbedienung

