
 

 



 





 

 

 



 



 

 











Originalfernbedienung Ersatzfernbedienung

	Source		AV / Input / RDS
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	EPG		Guide / EPG / -/--
	0		0
	PRE PR		Back / Return
	DTV/ATV		Setup / OPT /
	PR List		Smart / List
	ECO		Fav / Marker / PC

Originalfernbedienung Ersatzfernbedienung

	[i+]		Info / Angle
	Vol+		Vol+
	Mute		Mute / Dimmer
	PR+		CH+ / Page+
	Vol-		Vol-
	[<>]		Picture / Format
	PR-		CH- / Page-
	Dual		Audio / Lang I/II
	AJD Audio		Sound / Title
	ADJ Video		D.Menu / Top
	Sleep		Sleep / Timer
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Menu		Menu / Home
	Down		Down



