









 



 

 

 


 












 


 
 

 


 

 


 





Originalfernbedienung Ersatzfernbedienung

	System Power		Power
	Mute		Mute / Dimmer
	Music		Sound / Title
	Stereo		Audio / Lang I/II
	Night		Subtitle / EQ
	Entertain		Eject / Surround
	Straight / Effect		Picture / Format
	Level		Zoom / Size
	Sleep		Sleep / Timer
	Movie		TV/Radio /
	Set Menu		Menu / Home
	Up		Up
	A/B/C/D/E		Info / Angle
	Left		Left
	Select		OK
	Right		Right
	Down		Down

Originalfernbedienung Ersatzfernbedienung

	Volume+		Vol+
	Preset/CH+		CH+ / Page+
	Volume-		Vol-
	Preset/CH-		CH- / Page-
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	Multi CH In		9
	Standby		Shift + Power
	DTV/CBL		Shift + 1
	DVD		Shift + 2
	CD		Shift + 3





Originalfernbedienung Ersatzfernbedienung

	VCR	+	Shift + 4
	TUNER	+	Shift + 6
	V-AUX	+	Shift + 7
	MD / CD-R	+	Shift + 9

Originalfernbedienung Ersatzfernbedienung

