


Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Power AMP		Shift + Power
	CD		Red
	Recorder		Green
	Network		Yellow
	Phono		Blue
	AUX		Smart
	Tuner		Media
	Internet Radio Preset 1		Shift + 1
	Internet Radio Preset 2		Shift + 2
	Internet Radio Preset 3		Shift + 3
	Play		Play
	Pause		Pause
	I<<		I<<
	>>I		>>I
	Stop		Stop
	<<		<<

Originalfernbedienung Ersatzfernbedienung

	>>		>>
	Preset+		Ch +
	Preset-		Ch -
	Pure Direct/Favorite		Pre Ch
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Info		Info
	Mode		Format
	Source		AV
	Menu		Menu
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	1		1





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Power AMP	 + 	Shift + Power
	CD		Red
	Recorder		Green
	Network		Yellow
	Phono		Blue
	AUX		Smart
	Tuner		Media
	Play		Play
	Pause		Pause
	I<<		I<<
	>>I		>>I
	Stop		Stop
	<<		<<
	>>		>>
	Preset+		Ch +
	Preset-		Ch -

Originalfernbedienung Ersatzfernbedienung

	Pure Direct/Favorite		Pre Ch
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Info		Info
	Mode		Format
	Source		AV
	Menu		Menu
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	1		1
	2		2
	3		3
	4		4



