



Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
 Power/Standby	 Power		
 Play	 Play		
 Pause	 Pause		
 Stop/Band	 Stop		
 Skip/Search/Tuning g >>	 >>		
 <<	 <<		
 Skip/Search/Tuning			
 Timer	 AV		
 Function	 Menu		
 Sleep	 Sleep		
 Preset EQ	 3D		
 Random	 Media		
 Repeat/M-UP	 Text		
 Snooze	 Smart		
 Volume+	 Vol +		
 Volume-	 Vol -		
 Mute	 Mute		

