


 

 
 
 
 
 

 



 
 
 
 
 

 

 
 
 


 
 






 



 
 
 

 
 
 

 



 
 









 
 

 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	i		Info
	AV		AV
	Red		Red
	Green		Green
	Yellow		Yellow

Originalfernbedienung Ersatzfernbedienung

	Blue		Blue
	TV / DTV		Smart
	Menu		Menu
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	Guide		Guide
	Back		Back
	P-		Ch -
	P+		Ch +
	Vol+		Vol +
	Vol-		Vol -
	I/II		Dual
	OO		Shift + Dual
	TV / Radio		TV/R





**Originalfernbedienung    Ersatzfernbedienung**

	Colour System		Options
	Sleep Timer		Sleep
	[...]		Subt
	Zoom		Eject
	[≡]		Text
	[≡i]		List
	[?]		D. Menu
	[↓↑]		Format
	[⊖]		Shift + Subt

**Originalfernbedienung    Ersatzfernbedienung**






Originalfernbedienung Ersatzfernbedienung




 

 
 



 



 



	Power		Power
	Menu		Menu
	Back		Back
	OK		Ok
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	<<		<<
	Play		Play
	>>		>>
	Stop		Stop
	Pause		Pause
	Rec / Top Menu		Rec
	↑		Ch +
	↓		Ch -

Originalfernbedienung Ersatzfernbedienung





**Originalfernbedienung Ersatzfernbedienung**

	Power		Power
	<<		<<
	Play		Play
	>>		>>
	Rec		Rec
	Pause		Pause
	Stop		Stop
	Up		Ch +
	Down		Ch -

**Originalfernbedienung Ersatzfernbedienung**