 


Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
PWR On/Off		Power	
Mute		Mute	
Epg	 + 	Shift + Guide	
Info		Info	
Subt.List		Subt	
Video		AV	
Menu Up		Up	
TV		TV/R	
Text		Text	
Menu Left		Left	
Display	 + 	Shift + Info	
OK Enter		Ok	
Menu Right		Right	
Menu		Menu	
Exit		Exit	
Menu Down		Down	
Volume+		Vol +	
CH/Page+		Ch +	
Volume-		Vol -	
Audio		Dual	
CH/Page-		Ch -	
1. ?		1	
2abc		2	
3def		3	
4ghi		4	
5jkl		5	
6mno		6	
7pqrm		7	
8tuv		8	
East		Sleep	
9wxyz		9	
Guide Pilote		Guide	
		Format	
		Eject	



Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
Lang./Rewind		<<	
0/10		0	
LNB F.Forward		>>	
H/V Play		Play	
FAV Pref.		Pre Ch	
Dev		3D	
Aft/Caf		Media	
Red		Red	
Green		Green	
Store		Smart	
Yellow		Yellow	
Blue		Blue	
Search	 + 	Shift + TV/R	
Freeze		Pause	

