




Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-----------------|---|-----------------------------|
|  | Power |  | Power |
|  | Green / Prog. |  | Green / APP / Repeat |
|  | Green / Prog. |  | TV/Radio / |
|  | Yellow / Status |  | Yellow / YouTube / Repeat |
|  | Yellow / Status |  | Info / Angle |
|  | Blue / Guide |  | Blue / Prime Video / Random |
|  | Blue / Guide |  | Guide / EPG / -/-- |
|  | Red / Dec. |  | Red / Netflix / Search |
|  | Up |  | Up |
|  | Purple / Text |  | Display / Media |
|  | Purple / Text |  | Text / Goto |
|  | Exit |  | Exit / Cancel / Clear |
|  | Left / I<< |  | Left |
|  | Left / I<< |  | I<< / Preset- |
|  | OK |  | OK |
|  | Right / >>I |  | Right |
|  | Right / >>I |  | >>I / Preset+ |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|--------------|---|-------------------------------|
|  | Menu |  | Menu / Home |
|  | Vol+ |  | Vol+ |
|  | Down |  | Down |
|  | PR+ |  | CH+ / Page+ |
|  | Vol- |  | Vol- |
|  | Mute |  | Mute / Dimmer |
|  | PR- |  | CH- / Page- |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | Index / Mark |  | Fav / Marker / PC |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 0000 |  | Shift + Exit / Cancel / Clear |
|  | 7 |  | 7 |
|  | 8 |  | 8 |





Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|-----------------|--|-----------------------------|
| | Power | | Power |
| | Green / Prog. | | Green / APP / Repeat |
| | Green / Prog. | | TV/Radio / |
| | Yellow / Status | | Info / Angle |
| | Yellow / Status | | Yellow / YouTube / Repeat |
| | Blue / Guide | | Blue / Prime Video / Random |
| | Blue / Guide | | Guide / EPG / -/-- |
| | Red / Dec. | | Red / Netflix / Search |
| | Up | | Up |
| | Purple / Text | | Display / Media |
| | Purple / Text | | Text / Goto |
| | Exit | | Exit / Cancel / Clear |
| | Left / I<< | | I<< / Preset- |
| | Left / I<< | | Left |
| | OK | | OK |
| | Right / >>I | | Right |
| | Right / >>I | | >>I / Preset+ |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|--------------|--|-------------------------------|
| | Menu | | Menu / Home |
| | Vol+ | | Vol+ |
| | Down | | Down |
| | PR+ | | CH+ / Page+ |
| | Vol- | | Vol- |
| | Mute | | Mute / Dimmer |
| | PR- | | CH- / Page- |
| | 1 | | 1 |
| | 2 | | 2 |
| | 3 | | 3 |
| | Index / Mark | | Fav / Marker / PC |
| | 4 | | 4 |
| | 5 | | 5 |
| | 6 | | 6 |
| | 0000 | | Shift + Exit / Cancel / Clear |
| | 7 | | 7 |
| | 8 | | 8 |



