



Originalfernbedienung Ersatzfernbedienung

	Power On		Power
	Power Off		Shift + Power
	Dimmer		Mute / Dimmer
	Open/Close		Eject / Surround
	A-B Repeat		Shift + Yellow / YouTube /
	1		1
	2		2
	3		3
	Repeat		Shift + Green / APP /
	4		4
	5		5
	6		6
	Random		Shift + Blue / Prime
	7		7
	8		8
	9		9
	Zoom		Zoom / Size

Originalfernbedienung Ersatzfernbedienung

	Clear		Exit / Cancel / Clear
	0		0
	Search Mode		Shift + Red / Netflix /
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Top Menu		D.Menu / Top
	Up		Up
	Pop Up Menu /		Menu / Home
	Left		Left
	Enter		OK
	Right		Right
	Down		Down
	Setup		Setup / OPT /
	Return		Back / Return
	Angle		Info / Angle





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	Subtitle		Subtitle / EQ
	Audio		Audio / Lang I/II
	Pure Direct		Sound / Title
	Display		Display / Media
	Mode		Smart / List
	I<< Skip		I<< / Preset-
	Skip >>I		>>I / Preset+
	Stop		Stop / Hold
	Play		Play / Slow
	<<		<< / Tune-
	Still/Pause		Pause / Step / Freeze
	>>		>> / Tune+
	HDMI		Picture / Format
	Input Up Amp/Receiver		CH+ / Page+
	Vol+		Vol+
	Input Down Amp/Receiver		CH- / Page-
	Vol-		Vol-



Amp/Receiver