


 

 

 













 


 

 




 






 


 

 
 
 
 

 

 

 



 




**Originalfernbedienung Ersatzfernbedienung**

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Source/[≡]		AV
	Normal/OK/[≡i]		Ok
	PR+		Ch +
	Up		Up
	Down		Down
	PR-		Ch -

**Originalfernbedienung Ersatzfernbedienung**

	Right/[≡o]		Right
	Vol+		Vol +
	Vol-		Vol -
	Left/[≡+]		Left
	Menu		Menu
	Mute		Mute
	Recall/[≡?]		Pre Ch
	Sleep/[≡◇]		Sleep
	Red/Skip		Red
	Green/Movie		Green
	Yellow/Delete		Yellow
	Blue/Mode		Blue
	[≡]		Text
	[≡x]		TV/R

