





 
 







 
 














Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|------------|---|--------------------|
|  | Power |  | Power |
|  | Mute |  | Mute / Dimmer |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | TV / Radio |  | TV/Radio / |
|  | 0 |  | 0 |
|  | ←PR |  | Back / Return |
|  | EPG |  | Guide / EPG / -/-- |
|  | Up / PR+ |  | Up |
|  | Up / PR+ |  | Shift + Up |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-------------------|---|----------------------------|
|  | Menu |  | Menu / Home |
|  | Left / Vol- |  | Shift + Left |
|  | Left / Vol- |  | Left |
|  | OK / List |  | OK |
|  | OK / List |  | Shift + OK |
|  | Right / Vol+ |  | Shift + Right |
|  | Right / Vol+ |  | Right |
|  | Info |  | Info / Angle |
|  | Down / PR- |  | Shift + Down |
|  | Down / PR- |  | Down |
|  | Exit |  | Exit / Cancel / Clear |
|  | Red / Audio |  | Shift + Red / Netflix / |
|  | Red / Audio |  | Red / Netflix / Search |
|  | Page+ |  | CH+ / Page+ |
|  | Yellow / Subtitle |  | Shift + Yellow / YouTube / |
|  | Yellow / Subtitle |  | Yellow / YouTube / Repeat |
|  | Page- |  | CH- / Page- |





Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|-------------|---|------------------------------|
| | Green / TXT | + | Shift + Green / APP / REPEAT |
| | Green / TXT | | Green / APP / Repeat |
| | Pause | | Pause / Step / Freeze |
| | Blue / L/R | | Blue / Prime Video / Random |
| | :: | | Text / Goto |
| | FAV | | Fav / Marker / PC |
| | UHF | | Setup / OPT / |
| | PAL / NTSC | | D.Menu / Top |
| | Record | | Rec / Rec Mode |
| | Play | | Play / Slow |
| | Stop | | Stop / Hold |
| | TV / AV | | AV / Input / RDS |
| | << | | << / Tune- |
| | >> | | >> / Tune+ |
| | < Seek | | Shift + << / |
| | Seek > | | Shift + >> / |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|--|--|--|
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

