



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Input		AV / Input / RDS
	TV / TXT		Shift + Text /
	Cancel		Shift + Exit / Cancel / Clear
	Reveal		Setup / OPT /
	Nicam/A2		Shift + Sound / Title
	Hold		Stop / Hold
	Size		Shift + Zoom /
	Subpage		Eject / Surround
	Index		Smart / List
	Red / TV/Radio		Red / Netflix / Search
	Red / TV/Radio		TV/Radio /
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	CH+		CH+ / Page+
	Vol+		Vol+

Originalfernbedienung Ersatzfernbedienung

	CH-		CH- / Page-
	Vol-		Vol-
	Menu		Menu / Home
	Mute		Mute / Dimmer
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	DVB		D.Menu / Top
	Exit		Exit / Cancel / Clear
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6





Originalfernbedienung Ersatzfernbedienung

7	7	AUX - HDD 7	7
8	8	USB 8	8
9	9	BLUETOOTH 9	9
-/--	-/--	SHIFT + GUIDE EPG	Shift + Guide / EPG / -/--
0	0	HDMI - BAT 0	0
↻	Recall	RETURN BACK	Back / Return
PICTURE	Picture	FORMAT PICTURE	Picture / Format
SOUND	Sound	TITLE SOUND	Sound / Title
SLEEP	Sleep	TIMER SLEEP	Sleep / Timer
SUBTITLE	Subtitle	EQ SUBTITLE	Subtitle / EQ
LANGUAGE	Language	LANG I/II AUDIO	Audio / Lang I/II
DISPLAY/INFO	Display / Info	MEDIA DISPLAY	Display / Media
ZOOM	Zoom	SIZE ZOOM	Zoom / Size
TEXT	Text	GOTO TEXT	Text / Goto
EPG	EPG	-/-- GUIDE EPG	Guide / EPG / -/--
FAV	FAV	PC FAV MARKER	Fav / Marker / PC
FAV+	FAV+	SHIFT + CH PAGE	Shift + CH+ /

Originalfernbedienung Ersatzfernbedienung

FAV-	FAV-	SHIFT + CH PAGE	Shift + CH- /

