



Originalfernbedienung Ersatzfernbedienung

	POWER	 + 	Shift + Power
	POWER		Power
	INPUT NEXT		Source
	SHUT /		Comp / Video
	ASPECT		Eco / Aspect
	D. ZOOM +		+ / Play
	D. ZOOM -		- / Stop
	UP		Up
	DOWN		Down
	LEFT		Left
	RIGHT		Right
	ENTER		Enter
	AUTO SETUP		Auto
	FREEZE		Freeze / Timer
	USER		Blank / Mute
	STD		Mode

Originalfernbedienung Ersatzfernbedienung

