 
 
 

 



Originalfernbedienung Ersatzfernbedienung

	Off		Power
	Mode		Format
	Radio/Band		TV/R
	Audio In		AV
	I<</Tune-		I<<
	Play		Play
	Pause		Pause
	>>I/Tune+		>>I
	Preset+		Ch +
	Preset-		Ch -
	Up		Up
	Down		Down
	Vol+		Vol +
	Vol-		Vol -
	Menu		Menu
	Enter		Ok
	Mega Bass		Smart

Originalfernbedienung Ersatzfernbedienung

	Mega Xpand		Media
	Snooze		Mute

