



**Originalfernbedienung    Ersatzfernbedienung**

	Standby		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	F.List		Media
	RES		Smart
	Repeat		Text
	Capture		Format
	Book.M		3D

**Originalfernbedienung    Ersatzfernbedienung**

	Book.J		Shift + 3D
	R.Skip		I<<
	REW		<<
	FWD		>>
	F.Skip		>>I
	Rec		Rec
	Stop		Stop
	Play		Play
	Pause		Pause
	Menu		Menu
	Exit		Exit
	Info		Info
	Back		Back
	Up		Up
	Left		Left
	OK		Ok
	Right		Right



