




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	TV / Radio		TV/R
	Quelle		Smart
	Letzter		Pre Ch
	[≡ ≡]		Text
	+ [≡ ≡]		D. Menu
	PD+		3D
	Archiv		Media
	EPG		Guide
	▶		Shift + Pause
	↶		Back
	↑		Shift + Up
	◀		<<
	▶		Play
	▶▶		>>
	● Rec		Rec

Originalfernbedienung Ersatzfernbedienung

	⏮ Time Shift		Pause
	■ Live/Stop		Stop
	Red / PRO		Red
	Green / [_]		Green
	Yellow / OPT+		Yellow
	Blue / [≡]		Blue
	Liste		List
	i		Info
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	Menu		Menu
	Exit / Zurück		Exit
	Vol+		Vol +
	Vol-		Vol -



