



Originalfernbedienung Ersatzfernbedienung

	POWER ON		Shift + Power
	POWER		Power
	POWER OFF		Shift + Source
	ZOOM UP		+ / Play
	ZOOM DOWN		- / Stop
	FOCUS UP		Shift + Vol + / Page +
	FOCUS UP 2		Shift + Right
	FOCUS DOWN		Shift + Vol - / Page -
	FOCUS DOWN 2		Shift + Left
	VOL +		Vol + / Page +
	VOL -		Vol - / Page -
	MUTE		Blank / Mute
	MENU		Menu
	INPUT 1		Comp / Video
	INPUT 2		Shift + Comp / Video
	INPUT 3		Mode
	INPUT NEXT		Source

Originalfernbedienung Ersatzfernbedienung

	UP		Up
	LEFT		Left
	OK		Enter
	RIGHT		Right
	DOWN		Down
	LENS SHIFT		Eco / Aspect
	NO SHOW		3D / Invert
	AUTO PC ADJ.		Auto
	KEYSTONE UP		Shift + Up
	KEYSTONE		Shift + Down
	FREEZE		Freeze / Timer
	Image		Volt / Focus

