

 



 
 

 


 


 
 
 

 
 
 
 
 


 
 
 
 

 

 
 
 
 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Eject		Eject
	DVD	 + 	Shift + 1
	TUNER	 + 	Shift + 2
	PORT	 + 	Shift + 3
	AUX	 + 	Shift + 4
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Audio		Dual


Originalfernbedienung Ersatzfernbedienung

	Subtitle		Subt
	I<<		I<<
	Step	 + 	Shift + Pause
	Pause		Pause
	>>I		>>I
	<<		<<
	Stop		Stop
	Play		Play
	>>		>>
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Remain		Smart
	Tuning+ / CH+		Ch +
	Tuning- / CH-		Ch -
	Menu		Menu
	Return		Back



 
 
 
 




Originalfernbedienung    Ersatzfernbedienung

	Up		Up
	Left		Left
	Enter		Ok
	Right		Right
	Down		Down
	Info		Info
	Exit		Exit
	Dolby PL II Mode		Yellow
	Dolby PL II Effect		Blue
	DSP / EQ		Format
	Cancel		Shift + Exit
	Tuner Memory		Red
	Mo/St / Slow		List
	P.Bass		Options
	Sound Edit		Shift + Dual
	SD / HD		Media
	Logo		3D

Originalfernbedienung    Ersatzfernbedienung



 


 
 
 
 

 
 
 
 
 

 
 


 
 
 

 









	ASC		TV/R
	Repeat		Text
	Zoom		Shift + Eject
	CD Ripping		Rec
	Dimmer		Shift + Mute
	Sleep		Sleep






 


 
 










**Originalfernbedienung Ersatzfernbedienung**

	Power		Power
	Mute		Mute
	Menu		Menu
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Source		AV
	Vol+		Vol +
	Vol-		Vol -
	CH+		Ch +

**Originalfernbedienung Ersatzfernbedienung**

	CH-		Ch -
	Up		Up
	Left		Left
	Enter		Ok
	Right		Right
	Down		Down
	Info		Info

