


Originalfernbedienung Ersatzfernbedienung

	Standby		Power
	---		Media
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Text		Text
	Red / SUB-T		Red
	Red / SUB-T		Subt
	Green / Sort		Green
	Yellow / Timer		Yellow

Originalfernbedienung Ersatzfernbedienung

	Yellow / Timer	 + 	Shift + AV
	Blue / Info		Blue
	Blue / Info		Info
	Menu		Menu
	Exit		Exit
	Up		Up
	Left / <<		Left
	OK		Ok
	Right / >>		Right
	Down		Down
	Vol+		Vol +
	Vol-		Vol -
	Pause		Pause
	Guide		Guide
	Mute		Mute
	CH+		Ch +
	CH-		Ch -





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	TV / STB		AV				
	TV / Radio		TV/R				
	((•••)) A.L/R		Smart				
	A.Lang		Dual				
	Sleep		Sleep				
	Recall		Back				
	FAV		Pre Ch				
	P.STD		Format				
	P.Size		List				
	Zoom		Eject				
	M-PIG		3D				

