
 


















Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Display		Display / Media
	Setup		Setup / OPT /
	Mute		Mute / Dimmer
	Menu		Menu / Home
	Music		Sound / Title
	Copy		Fav / Marker / PC
	Zoom		Zoom / Size
	TV System		TV/Radio /
	Browser		Info / Angle
	Vol-		Vol-
	Vol+		Vol+
	Guide		Guide / EPG / -/-
	Return		Back / Return
	Up		Up
	Left		Left
	Enter		OK

Originalfernbedienung Ersatzfernbedienung

	Right		Right
	Down		Down
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Time Shift		Picture / Format
	0		0
	Goto		Text / Goto
	Rec		Rec / Rec Mode
	Play		Play / Slow
	Stop		Stop / Hold




Originalfernbedienung Ersatzfernbedienung

	Timer		Sleep / Timer
	Pause/Step		Pause / Step / Freeze
	I>/Slow		Eject / Surround
	I<<		I<< / Preset-
	Rec List		Smart / List
	←/INS Replay		CH- / Page-
	→/CM Skip		CH+ / Page+
	>>I		>>I / Preset+
	A-B		Yellow / YouTube / Repeat
	Subtitle		Subtitle / EQ
	Repeat		Green / APP / Repeat
	<<		<< / Tune-
	F1		D.Menu / Top
	Source		AV / Input / RDS
	Audio		Audio / Lang I/II
	>>		>> / Tune+

Originalfernbedienung Ersatzfernbedienung

