 




 


 
 

 




















Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|---------|---|---------------|
|  | Power |  | Power |
|  | Mute |  | Mute |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0 |  | 0 |
|  | -/-- |  | Shift + Guide |
|  | Recall |  | Back |
|  | Display |  | Info |
|  | Source |  | AV |
|  | Up |  | Up |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-------------|---|----------------|
|  | Left |  | Left |
|  | Enter |  | Ok |
|  | Right |  | Right |
|  | Down |  | Down |
|  | Exit |  | Exit |
|  | Menu |  | Menu |
|  | Vol+ |  | Vol + |
|  | Vol- |  | Vol - |
|  | S.Mode |  | Shift + Dual |
|  | CH+ |  | Ch + |
|  | CH- |  | Ch - |
|  | Audio I/II |  | Dual |
|  | P.Mode |  | Shift + Format |
|  | Auto |  | Smart |
|  | Sleep |  | Sleep |
|  | Aspect |  | Format |
|  | Red / Eject |  | Red |

 

 


 



 







 
 


 
 





Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-------------------|---|--------------|
|  | Red / Eject |  | Eject |
|  | Green / D.Menu |  | Green |
|  | Green / D.Menu |  | D. Menu |
|  | Yellow / Setup |  | Yellow |
|  | Yellow / Setup |  | Options |
|  | Blue / D.Disp |  | Blue |
|  | Blue / D.Disp |  | List |
|  | Play/Pause / Text |  | Text |
|  | Play/Pause / Text |  | Play |
|  | Play/Pause / Text |  | Pause |
|  | Stop / Index |  | Stop |
|  | A-B / MIX |  | Shift + TV/R |
|  | Repeat / Reveal |  | Shift + Text |
|  | << / Hold |  | Shift + Stop |
|  | << / Hold |  | << |
|  | >> / Subpage |  | >> |
|  | >> / Subpage |  | Shift + Subt |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|--------------|---|---------------|
|  | I<< / Size |  | I<< |
|  | I<< / Size |  | Shift + Eject |
|  | >>I / Cancel |  | >>I |
|  | >>I / Cancel |  | Shift + Exit |
|  | Time Shift |  | Media |
|  | Rec |  | Rec |
|  | FAV- |  | Shift + Left |
|  | FAV+ |  | Shift + Right |
|  | EPG |  | Guide |
|  | FAV |  | Pre Ch |
|  | Subtitle |  | Subt |
|  | TV / Radio |  | TV/R |

