



Originalfernbedienung Ersatzfernbedienung

	On / Off		Power
	Mute		Mute / Dimmer
	Stored		Smart / List
	CD - DVD		Shift + 3
	CD - DVD		Shift + 2
	FM - AM		Shift + 6
	TV		Shift + 1
	CBL - SAT		Shift + 0
	AUX		Shift + 7
	Text / Library		Text / Goto
	Up / Tune +		Up
	Up / Tune +		>> / Tune+
	DVD Menu		D.Menu / Top
	Settings		Setup / OPT /
	Left		Left
	Enter		OK
	Right		Right

Originalfernbedienung Ersatzfernbedienung

	Guide		Guide / EPG / -/-
	System		Menu / Home
	Down / Tune -		Down
	Down / Tune -		<< / Tune-
	Exit		Exit / Cancel / Clear
	Track/Chap./CH +		CH+ / Page+
	Volume +		Vol+
	Track/Chap./CH -		CH- / Page-
	Volume -		Vol-
	Stop		Stop / Hold
	Pause		Pause / Step / Freeze
	Play		Play / Slow
	I<< Seek		I<< / Preset-
	>>I Seek		>>I / Preset+
	Shuffle / ↻		Shift + I<< / Preset-
	Shuffle / ↻		Shift + Blue / Prime
	Repeat / ↻		Shift + >>I / Preset+





**Originalfernbedienung Ersatzfernbedienung**

Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
Repeat / ↻	+  Shift + Green / APP /	Green / CD #	Green / APP / Repeat
1	1	Yellow / Playlist	Yellow / YouTube / Repeat
2	2	Blue / Whole CD	Blue / Prime Video / Random
3	3		
4	4		
5	5		
6	6		
7	7		
8	8		
9	9		
Info	Info / Angle		
0	0		
Previous	Back / Return		
uMusic	Sound / Title		
Rating-	+  Shift + CH- /		
Rating+	+  Shift + CH+ /		
Red / Encore	Red / Netflix / Search		

**Originalfernbedienung Ersatzfernbedienung**

Originalfernbedienung	Ersatzfernbedienung
Green / CD #	Green / APP / Repeat
Yellow / Playlist	Yellow / YouTube / Repeat
Blue / Whole CD	Blue / Prime Video / Random

