


Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Search		TV/R
	COMP1/2		Red
	BNC		Green
	DVI-D/HDMI		Yellow
	Video1/2		Blue
	S-Video		AV
	Lan/USB		Media
	Menu		Menu
	User		List
	Up		Up
	Left		Left
	Right		Right
	Down		Down
	Enter		Ok
	Esc		Exit
	Page Up		Ch +

Originalfernbedienung Ersatzfernbedienung

	Page Down		Ch -
	Pointer		Smart
	E-Zoom+		Eject
	E-Zoom-		Shift + Eject
	1		1
	A/V Mute		Mute
	2		2
	Split		Subt
	3		3
	Freeze		Pause
	4		4
	Auto		Info
	5		5
	Aspect		Format
	6		6
	Color Mode		Options
	7		7





Originalfernbedienung Ersatzfernbedienung

	(7)		Shift + 7
	8		8
	(8)		Shift + 8
	9		9
	(9)		Shift + 9
	0		0
	?/Help		D. Menu
	Vol-		Vol -
	Vol+		Vol +

Originalfernbedienung Ersatzfernbedienung

