









 





 

 






 












Originalfernbedienung Ersatzfernbedienung

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Lang		Audio / Lang I/II
	0		0
	[≡]...		Subtitle / EQ
	Home		Shift + Menu /
	Home		D.Menu / Top
	V+		Vol+
	Mute		Mute / Dimmer

Originalfernbedienung Ersatzfernbedienung

	P+		CH+ / Page+
	V-		Vol-
	Source		AV / Input / RDS
	P-		CH- / Page-
	[G]		Guide / EPG / -/-
	i		Info / Angle
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	←		Back / Return
	Down		Down
	Exit		Exit / Cancel / Clear
	Netflix		Shift + Red / Netflix /
	YouTube		Shift + Yellow / YouTube /
	Menu		Menu / Home
	*1		Picture / Format



