



Originalfernbedienung Ersatzfernbedienung

	Power VCR		Power
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Play		Play
	Stop		Stop
	>>		>>
	<<		<<
	Pause/Slow		Pause
	Rec/OTR		Rec
	Display		Info
	Zero Stop		Smart
	Jog/Shuttle On		Media
	I<< Index		I<<
	>>I Index		>>I
	Tracking/V-Lock+		Ch +

Originalfernbedienung Ersatzfernbedienung

	Tracking/V-Lock-		Ch -
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Input Select		Guide
	Vol+		Vol +
	Vol-		Vol -
	OSD		Back
	Audio Out		Dual





Originalfernbedienung Ersatzfernbedienung

	Tv/AV		Pre Ch
	TV CH+		Shift + Ch +
	TV CH-		Shift + Ch -
	Power Tv		Shift + Power
	<< Wheel		Shift + Left
	Wheel >>		Shift + Right
	Central Wheel >>		Shift + Up
	<< Central Wheel		Shift + Down
	Reset		TV/R
	Menu		Menu
	Exit		Exit
	Store		3D
	PDC/VPS		Blue
	SP/LP		Format
	Timer Rec		Red
	Check		Green
	Transmit		Yellow




 



 














 
 

 



 




Originalfernbedienung Ersatzfernbedienung

	Nothing 1		Shift + AV
	Nothing 2		Shift + Format
	Direct Tv Rec		Options
	AV Link		Text
	Jog/Shuttle ▲		Shift + Media






Originalfernbedienung Ersatzfernbedienung

	Power VCR		Power
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Play		Play
	Stop		Stop
	>>		>>
	<<		<<
	Pause/Slow		Pause
	Rec/OTR		Rec
	Display		Info
	Reset		TV/R
	Zero Stop		Smart
	Jog/Shuttle On		Media
	Jog/Shuttle ▲		Shift + Media
	I<< Index		I<<

Originalfernbedienung Ersatzfernbedienung

	Index >>I		>>I
	Tracking/V.Lock+		Ch +
	Tracking/V.Lock-		Ch -
	OSD		Back
	Audio Out		Dual
	Input Select		AV
	Tv/AV		Pre Ch
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0





Originalfernbedienung Ersatzfernbedienung

	-/--		Guide
	Vol+		Vol +
	Vol-		Vol -
	Tv CH+		Shift + Ch +
	Tv CH-		Shift + Ch -
	Direct Tv Rec		Options
	AV Link		Text
	Menu		Menu
	Exit		Exit
	Store		3D
	Nothing 1		Shift + AV
	Nothing 2		Shift + Format
	SP/LP		Format
	PDC/VPS		Blue
	Transmit		Yellow
	Power Tv		Shift + Power
	Timer Rec		Red

Originalfernbedienung Ersatzfernbedienung

	Check		Green

