



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	P+		CH+ / Page+
	P-		CH- / Page-
	Vol+		Vol+
	Vol-		Vol-
	Open/Close		Eject / Surround
	Guide		Guide / EPG / -/--







 



 

 















 

 



Originalfernbedienung Ersatzfernbedienung

	Mute		Mute / Dimmer
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	<<		<< / Tune-
	>>		>> / Tune+
	Stop		Stop / Hold
	Pause		Pause / Step / Freeze
	Play		Play / Slow
	Info		Info / Angle
	Exit		Exit / Cancel / Clear
	Media Center		Display / Media
	Up		Up
	Home Menu		Menu / Home
	Pop-Up Menu		D.Menu / Top
	Down		Down
	Left		Left
	Right		Right

 


 















**Originalfernbedienung Ersatzfernbedienung**

	Ok		OK
	Option		Setup / OPT /
	Return		Back / Return
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Rec		Rec / Rec Mode
	Text		Text / Goto
	Sub		Subtitle / EQ
	Radio		TV/Radio /
	Rec Timer		Sleep / Timer
	Rec List		Smart / List
	Display Disc		Shift + Display / Media
	Audio D))		Sound / Title
	Format		Picture / Format
	Audio oo		Audio / Lang I/II

**Originalfernbedienung Ersatzfernbedienung**

	Canal Play		Fav / Marker / PC
	Viera CAST		AV / Input / RDS
	Power Tv		Shift + Power
	Vol+Tv		Shift + Vol+
	Vol-Tv		Shift + Vol-
	P+Tv		Shift + CH+ /
	P-Tv		Shift + CH- /
	Av Tv		Shift + AV / Input / RDS

