




 
 



 

 

 





 

 

 







 



 


 

 

 





Originalfernbedienung Ersatzfernbedienung

	Display		Display / Media
	Power		Power
	Function-		Shift + Down
	Function+		Shift + Up
	Sound		Sound / Title
	Menu		Menu / Home
	Timer		Sleep / Timer
	Up		Up
	Folder-		CH- / Page-
	OK		OK
	Folder+		CH+ / Page+
	Down		Down
	Return		Back / Return
	Clear		Exit / Cancel / Clear
	I<</Preset-		I<< / Preset-
	Play		Play / Slow
	Pause		Pause / Step / Freeze

Originalfernbedienung Ersatzfernbedienung

	>>I/Preset+		>>I / Preset+
	<</Tuning-		<< / Tune-
	Stop		Stop / Hold
	>>/Tuning+		>> / Tune+
	Vol+		Vol+
	Vol-		Vol-

