



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		Shift + Guide / EPG / -/--
	Recall		Back / Return
	Vol +		Vol+
	Pic. Mode		Picture / Format
	S. Mode		Sound / Title

Originalfernbedienung Ersatzfernbedienung

	CH +		CH+ / Page+
	Vol -		Vol-
	Source		AV / Input / RDS
	CH -		CH- / Page-
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Exit		Exit / Cancel / Clear
	Down		Down
	Menu		Menu / Home
	Aspect		Zoom / Size
	Sleep		Sleep / Timer
	Media		Display / Media
	MTS		Smart / List
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat





**Originalfernbedienung Ersatzfernbedienung**

	Yellow	 REPEAT A-B	Yellow / YouTube / Repeat
	Blue	 RANDOM	Blue / Prime Video / Random
	FAV		Fav / Marker / PC
	TV / Radio		TV/Radio /
	Audio		Audio / Lang I/II
	Subtitle		Subtitle / EQ
	Size/Play/Pause		Play / Slow
	Reveal/Stop		Pause / Step / Freeze
	EPG		Guide / EPG / -/--
	Info		Info / Angle
	Text/I<<		I<< / Preset-
	Index/>>I		>>I / Preset+
	Subpage/<<		<< / Tune-
	Hold/>>		>> / Tune+

**Originalfernbedienung Ersatzfernbedienung**


