
 


 

 


 
 
 

 
 




 

 


 
 

 
 









Originalfernbedienung Ersatzfernbedienung


 






 

 
 



 
 
 
	Power		Power
	Open / Close		Exit
	Red / ·))		Dual
	Red / ·))		Red
	Green / [...]		Green
	Green / [...]		Subt
	Yellow / Info		Yellow
	Yellow / Info		Info
	Blue / Guide		Blue
	Blue / Guide		Guide
	Purple / Angle		Format
	Zoom		Eject
	TV / DVD		TV/R
	Live		Smart
	Clear		Shift + Exit
	Again		Vol +
	Adv		Vol -

Originalfernbedienung Ersatzfernbedienung

	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	Return		Back
	Menu		Menu
	>>		>>
	<<		<<
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	9		9				
	0 / --		0				
	AV		AV				
	<<<		<<<				
	>>>		>>>				
	Play		Play				
	Stop		Stop				
	Pause		Pause				
	Record		Rec				

