




 

 


 




 

 




 

 

 






 

 
 
 
 
 

 
 
 







**Originalfernbedienung Ersatzfernbedienung**

	Power		Power
	SD		Smart
	[ + ]		Info
	Tv/AV		AV
	Menu		Menu
	Exit		Exit
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Tv/Text		Text
	F.P.		Eject

**Originalfernbedienung Ersatzfernbedienung**

	Index		List
	Hold		Options
	N		Media
	CH+		Ch +
	CH-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9




**Originalfernbedienung Ersatzfernbedienung**



 
 


 
 








 

0	0
-/--	Guide
C	Pre Ch
Aspect	3D
(↔)	Format
Multiwindow	D. Menu
Direct Tv Rec	TV/R
Power VCR	Shift + Power
Rec VCR	Rec
Programme Up	Shift + Ch +
Programme Down	Shift + Ch -
<< VCR	<<
>> VCR	>>
Stop VCR	Stop
Pause/Step VCR	Pause
Play VCR	Play

**Originalfernbedienung Ersatzfernbedienung**





**Originalfernbedienung    Ersatzfernbedienung**

 Power DVD	 Power
 Rec DVD	 Rec
 Programme Up	 Ch +
 Programme Down	 Ch -
 << DVD	 <<
 >> DVD	 >>
 Stop DVD	 Stop
 Pause/Step DVD	 Pause
 Play DVD	 Play

**Originalfernbedienung    Ersatzfernbedienung**